




Type-C Interface

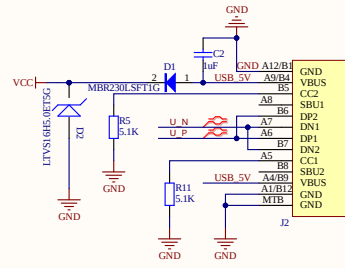


POWER

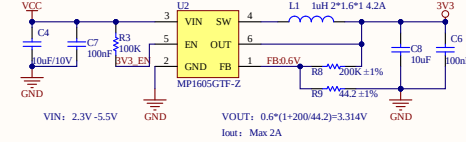


Recharge

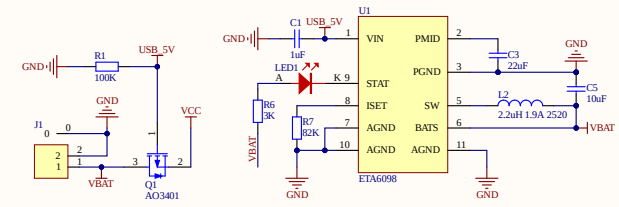


FLASH

 



Gyroscope

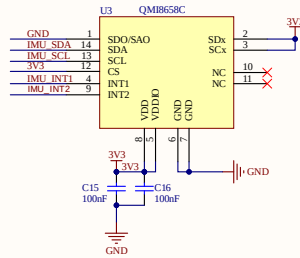

RGB

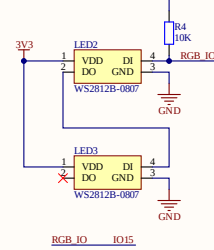


1.9 INCH

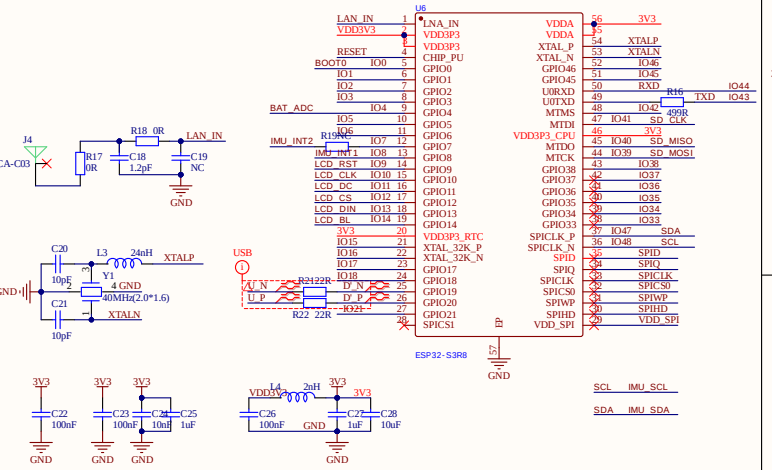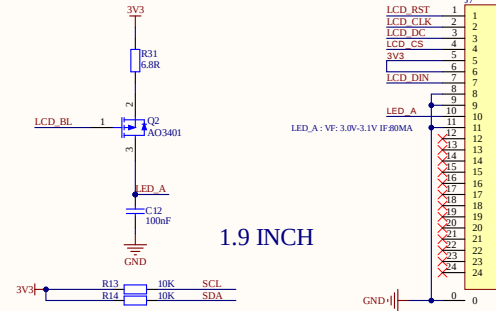

ESP32-S3-LCD-1.9

GPIO	LCD	SD Card	IMU	UART	I2C	KEY_IO	Other
IO0						BOOT0	IO0
IO1							IO1
IO2							IO2
IO3							IO3
IO4							BAT_ADC
IO5							IO5
IO6							IO6
IO7							IO7
IO8							IMU_INT2
IO9	LCD_RST						IMU_INT1
IO10	LCD_CLK						
IO11	LCD_DC						
IO12	LCD_CS						
IO13	LCD_DIN						
IO14	LCD_BL						
IO15							IO15
IO16							IO16
IO17							IO17
IO18							IO18
IO19							IO19
IO20							IO20
IO21							IO21
IO22							IO22
IO23							IO23
IO24							IO24
IO25							IO25
IO26							IO26
IO27							IO27
IO28							IO28
IO29							IO29
IO30							IO30
IO31							IO31
IO32							IO32
IO33							IO33
IO34							IO34
IO35							IO35
IO36							IO36
IO37							IO37
IO38							IO38
IO39							IO39
IO40							IO40
IO41							IO41
IO42							IO42
IO43							IO43
IO44							IO44
IO45							IO45
IO46							IO46
IO47							IO47
IO48							IO48
EN							RESET

TF CARD

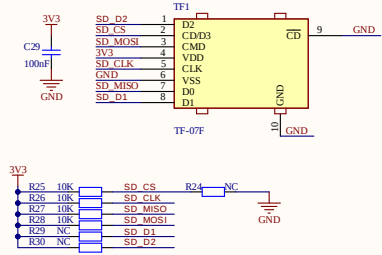

GPIO_OUT

