 
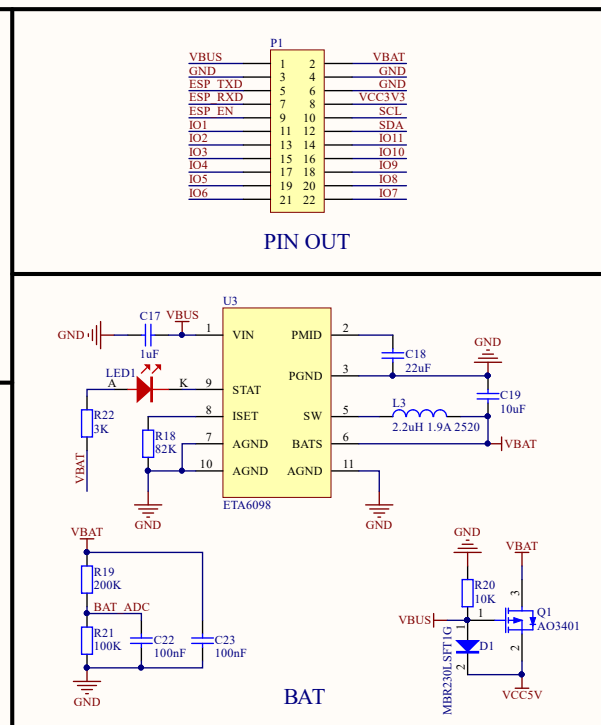 
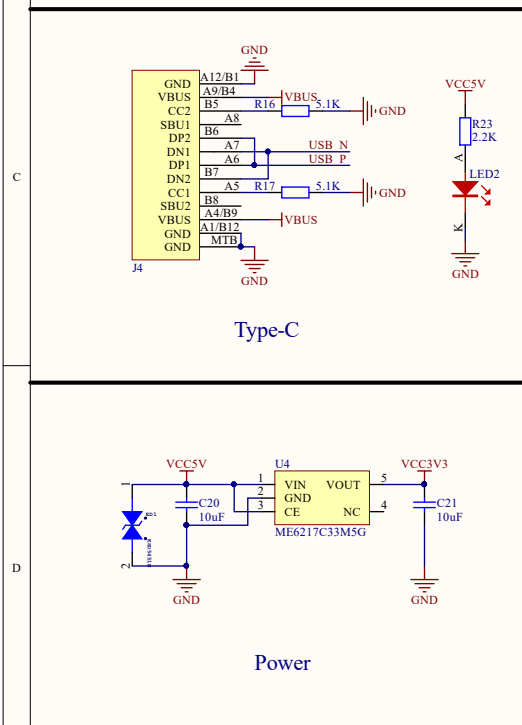 
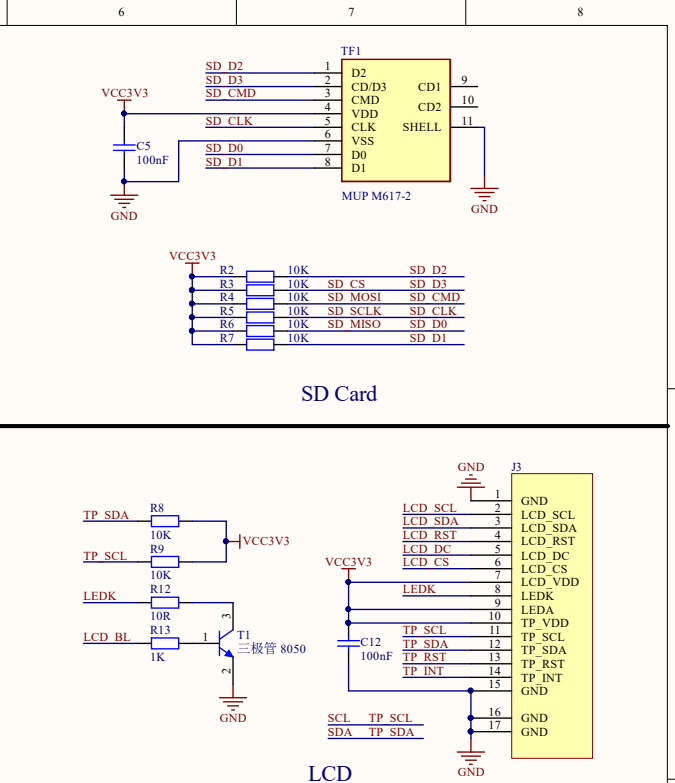 


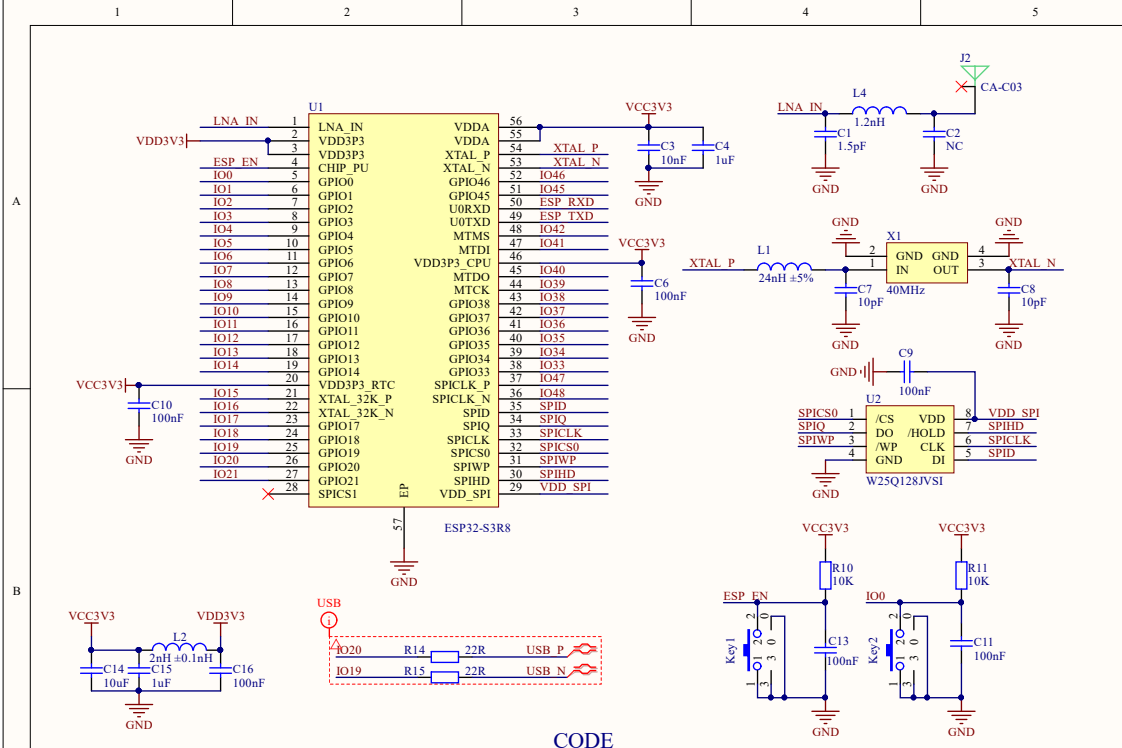

ESP32-S3	SD Card	LCD	Other
IO1			IO1
IO2			IO2
IO3			IO3
IO4			IO4
IO5			IO5
IO6			IO6
IO7			IO7
IO8			IO8
IO9			IO9
IO10			IO10
IO11			IO11
IO12	BAT_ADC		
IO13	SD D2		
IO14	SD D3		
IO15	SD CMD		
IO16	SD CLK		
IO17	SD D0		
IO18	SD D1		
IO19			USB N
IO20			USB P
IO21		LCD CS	
IO38		LCD SCL	
IO39		LCD SDA	
IO40		LCD RST	
IO41		TP SCL	
IO42		TP SDA	
IO43			ESP TXD
IO44			ESP RXD
IO45		LCD DC	
IO46		LCD BL	
IO47		TP RST	
IO48		TP INT	